



**WARNING:**

THE PURCHASER OF THESE PRODUCTS SHOULD TAKE WARNING THAT A DEVIATION FROM THE INSTALLATION INSTRUCTIONS COULD INCREASE THE RISK OF INJURY TO GAME PARTICIPANTS.

**WARNING TO USER:**

THE PURCHASER AND/OR USER OF THIS ATHLETIC PRODUCT IS REQUIRED TO ADVISE THE GAME PARTICIPANTS OF THE HAZARDS OF CONTACT WITH THIS EQUIPMENT. CONTACT YOUR COACH FOR PROPER METHOD OF SLIDING AND BASE RUNNING


# BASEBALL/SOFTBALL BASES INSTALLATION IN- STRUCTIONS



Manufactured for Schutt Sports by:  
Schutt Manufacturing Co.  
610 South Industrial Drive  
Litchfield, IL 62056-3040  
Phone: 800-426-9784  
Fax: 217-324-2732  
Website: [www.schuttsports.com](http://www.schuttsports.com)

### HOME PLATE ECONOMY

MODEL: SHP-EC 12805000

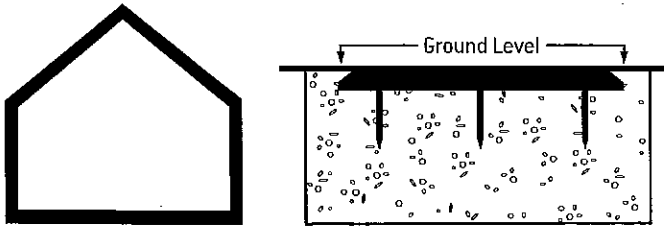


**SPECIAL NOTE:** When installing, do not pound directly on the plate as it may cause damage. Place a 2" thick piece of wood over the plate and use a hammer to pound on the block of wood.

#### CAUTION:

Installer should make sure top of home plate is level with playing surface.

### RUBBER BURY STYLE

MODEL SHP-BS 12806500

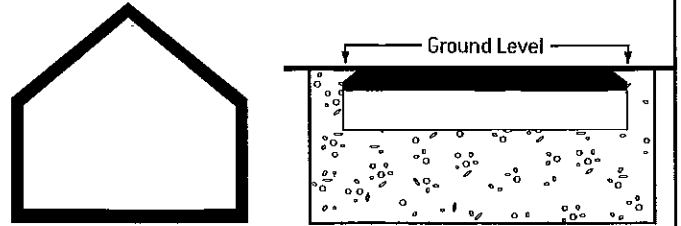


#### CAUTION:

Installer should make sure top of home plate is level with playing surface.

### PITCHERS PLATES ECONOMY

MODELS: SPR-ECO 12807500 & SPR-ECY 12808000

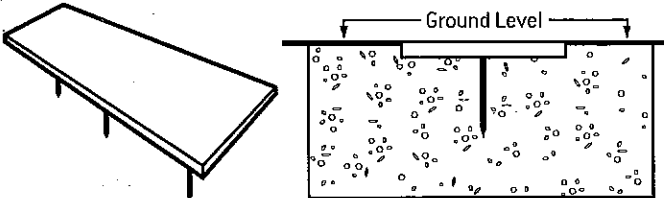


**SPECIAL NOTE:** When installing, do not pound directly on the plate as it may cause damage. Place a 2" thick piece of wood over the plate and use a hammer to pound on the block of wood.

#### CAUTION:

Installer should make sure pitcher's plate is level with playing surface.

### PITCHER'S PLATE 4-WAY

MODELS: SPR-4SD 12808500 & SPR-4SY 12809000 & BBPB 12909180

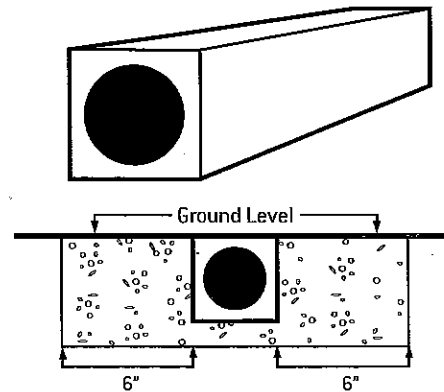


#### CAUTION:

Installer should make sure pitcher's plate is level with playing surface.

### STEP DOWN PITCHER'S PLATES


MODELS: SPR-SD 12809500 & SPR-SDY 12810000

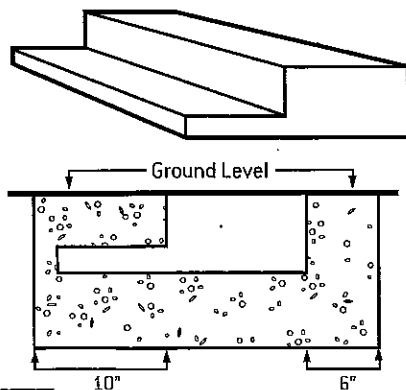

#### CAUTION:

Installer should make sure pitcher's plate is level with playing surface.

### FOAM FILLED BASES

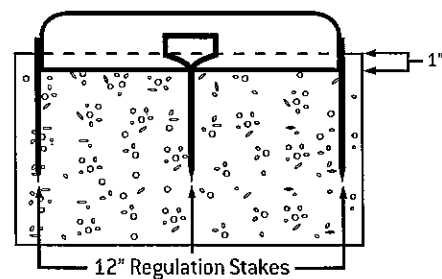

First Base Foul Line

#### CAUTION:

Installer should make sure base is 1" below playing surface. To avoid injury, do not use in ground anchors in combination with this product.


## MODELS:

SBB-MLA 12812500, SBB-SA 12813500, SBB-PSA 12814000, SBB-SFB 12813000, SHP-AS 12806000 & BBPB 12909180

1. Prepare a 10" square section approximately 2.5" away from the base line by digging 7" deep.
2. Drive the 1.5" square wooden peg, 10" in length into the center of the hole. Do not set the wooden peg too firmly, in order to be able to remove it later. Make sure the sides of the peg are parallel to the base line and the top of the peg is perpendicular to the ground level.
3. Place the ground anchor over the peg; flared end down. The bottom of the anchor should rest on the bottom of the hole. With a straight edge, check to insure that there is a distance of 1" from the top of the ground anchor to ground level.
4. In order to prevent concrete from blocking the lower end of the ground anchor tube or from holding in the peg, press a small amount of dirt around the bottom of the ground anchor.
5. Fill the hole with 5" of concrete. The upper end of the ground anchor should be 1" above the top of the concrete. Concrete should be completely hardened before removing the peg. Insert BBP-64 Rubber Plug.
6. Fill hole with dirt on top of concrete, on an angle from the outer edge of the hole inward and downward to where the ground anchor tube and the concrete meet.


## MAINTENANCE:

Keep ground anchors covered with 12916580 BBP-64 Rubber Plugs when not in use to prevent dirt from getting into the anchor. Remove any dirt that might obstruct the base from entering the ground anchor.

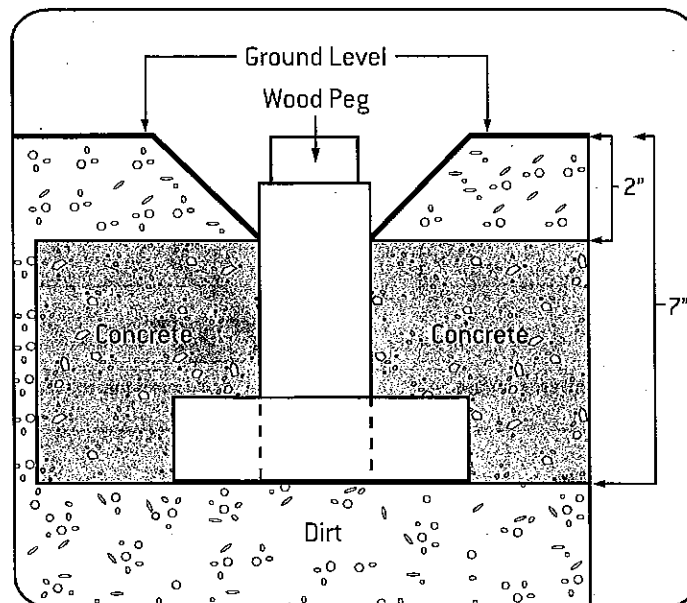

### FOAM FILLED DOUBLE FIRST BASE

MODELS: SBB-303 12804000, SBB-282 12804500 & SBB-302 12824500

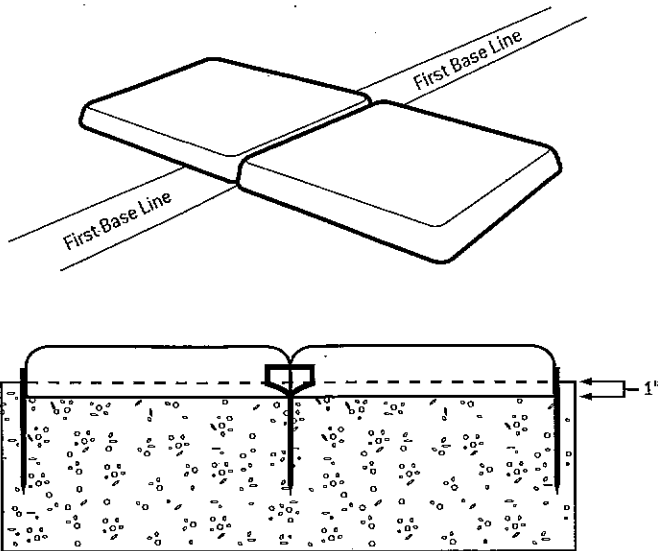


#### CAUTION:

Installer should make sure base is 1" below playing surface.

### SCHUTT ANCHOR BASES

MODELS: SBB-MLA 12812500, SBB-PSA 12814000 & SBB-SA 12813500

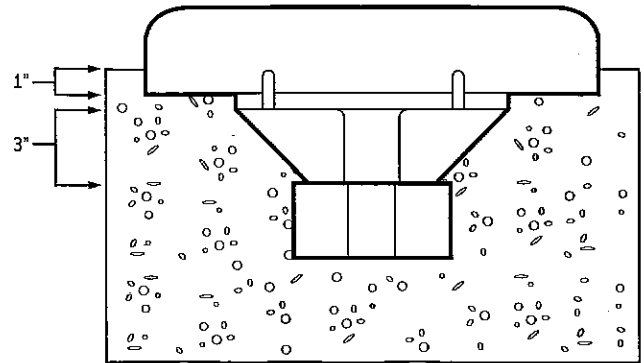


#### CAUTION:

Installer should make sure base is 1" below playing surface.

### SCHUTT ANCHOR STYLE HOME PLATE

MODEL: SHP-EC 12805000

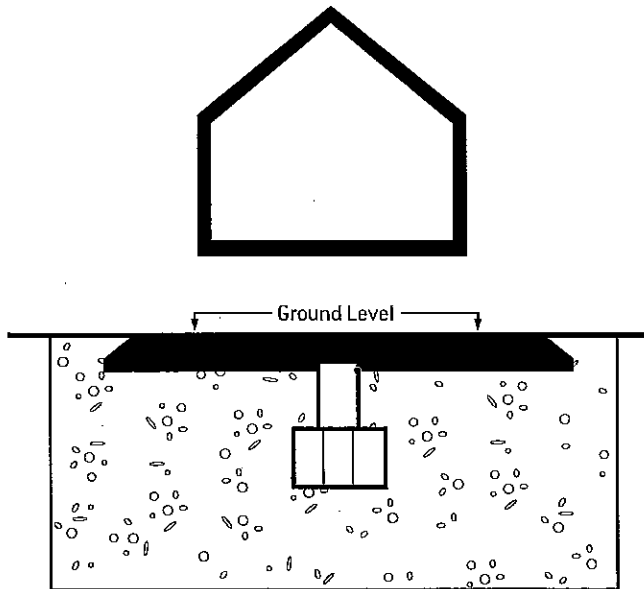


#### CAUTION:

Installer should make sure top of home plate is level with playing surface.

### SCHUTT ANCHOR STYLE DOUBLE FIRST BASE

MODEL: SHP-EC 12805000

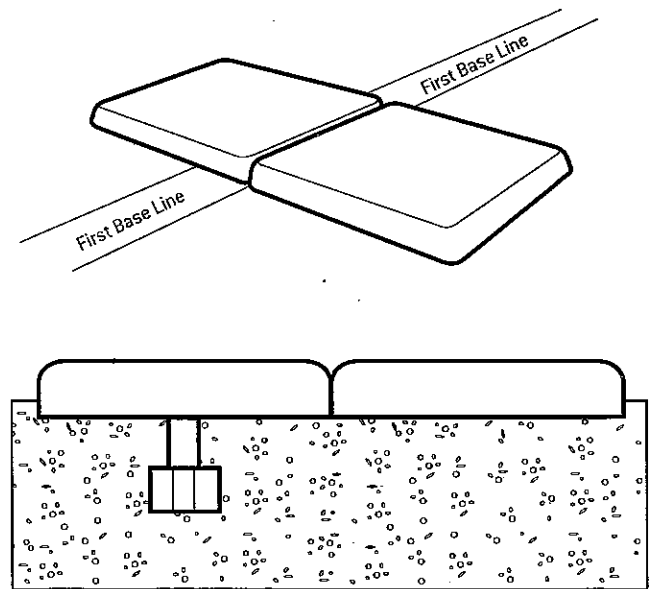

#### CAUTION:

Installer should make sure top of home plate is level with playing surface.

**schutt**  
SPORTS

TOLL FREE: 800-426-9784

FAX: 217-324-2732

SCHUTTSPTS.COM